 


PURE

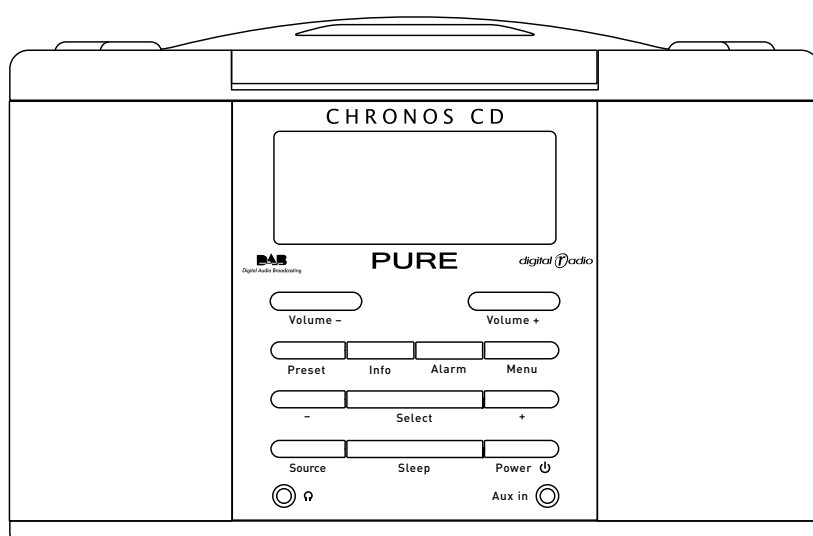

Brugsvejledning

⚠ Safety instructions
Keep the radio away from heat sources.
Do not use the radio near water.
Avoid objects or liquids getting into the radio.
Do not remove screws from or open the radio casing.
Fit the mains adaptor to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.

⚠ Sicherheitshinweise
Halten Sie das Radio fern von Heizquellen.
Benutzen Sie das Radio nicht in der Nähe von Wasser.
Verhindern Sie, dass Gegenstände oder Flüssigkeiten in das Radio gelangen.
Entfernen Sie keine Schrauben vom Gehäuse und öffnen Sie dieses nicht.
Schließen Sie das Netzteil an eine leicht erreichbare Steckdose in der Nähe des Radios an, und benutzen Sie AUSSCHLIESSLICH das mitgelieferte Netzteil.

⚠ Consignes de sécurité
Tenir la radio éloignée de toute source de chaleur.
Ne pas utiliser la radio à proximité d'un point d'eau.
Éviter que des objets ou des liquides ne pénètrent à l'intérieur de la radio.
Ne pas ouvrir le boîtier de la radio ou en enlever les vis.
Branchez l'adaptateur sur une prise de courant facilement accessible, à proximité de la radio et utilisez UNIQUEMENT l'adaptateur fourni.

⚠ Istruzioni di sicurezza
Tenere la radio lontana da fonti di calore.
Non utilizzare la radio vicino all'acqua.
Evitare che oggetti o liquidi penetrino nella radio.
Non rimuovere le viti né aprire l'involucro della radio.
Collegare l'adattatore di rete ad una presa della corrente facilmente accessibile, situata vicino alla radio e utilizzare ESCLUSIVAMENTE l'adattatore di rete fornito.

⚠ Sikkerhedsforskrifter
Hold radioen på afstand af varmekilder.
Brug ikke radioen i nærheden af vand.
Undgå at der kommer genstande eller væske i radioen.
Fjern ikke skruer fra og åbn ikke radiokabinettet.
De bør tilslutte strømforsyningen til et lettilgængeligt strømudtag tæt på radioen. De bør KUN bruge den medfølgende strømforsyning.

⚠ Veiligheidsinstructies
Houd de radio uit de buurt van warmtebronnen.
Gebruik de radio niet in de buurt van water.
Vermijd dat voorwerpen of vloeistoffen in de radio terechtkomen.
Verwijder geen schroeven uit de omkasting van de radio en open het niet.
Steek de lichtnetadapter in een gemakkelijk toegankelijk stopcontact in de buurt van de radio en gebruik ALLEEN de meegeleverde spanningsadapter voor het lichtnet.

Copyright
Copyright 2007 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

Copyright
Copyright 2007 by Imagination Technologies Limited. Alle Rechte vorbehalten. Kein Teil dieser Publikation darf ohne ausdrückliche und schriftliche Zustimmung von Imagination Technologies Limited in irgendeiner Form (elektronisch, mechanisch, magnetisch, manuell oder auf andere Weise) kopiert, verteilt, übermittelt, überschrieben, in einem Suchsystem gespeichert, in eine andere natürliche oder Computersprache übersetzt oder Dritten zugänglich gemacht werden.

Copyright
Copyright 2007 Imagination Technologies Limited. Tous droits réservés. Aucune partie de la présente publication ne doit être copiée ou diffusée, transmise, retranscrite, stockée dans un système de récupération de données ou traduite, que ce soit dans une langue humaine ou dans un langage informatique, sous quelque forme et par quelque moyen que ce soit, électronique, mécanique, magnétique, manuel ou autre, ou encore diffusée auprès de tiers sans autorisation écrite expresse de Imagination Technologies Limited.

Copyright
Copyright 2007 by Imagination Technologies Limited. Tutti i diritti riservati. Nessuna parte della presente pubblicazione può essere copiata o distribuita, trasmessa, trascritta, memorizzata in un sistema di archiviazione, o tradotta in un formato normalmente comprensibile, in qualsiasi forma o con qualsiasi mezzo, elettronico, meccanico, magnetico, manuale o altro, o divulgata a terze parti senza il permesso scritto di Imagination Technologies Limited.

Copyright
Copyright 2007 tilhører Imagination Technologies Limited. Alle rettigheder forbeholdes. Ingen dele af denne publikation må kopieres eller distribueres, transmitteres, omskrives, gemmes i et system, hvor den kan hentes, eller oversættes til menneskeligt forståeligt sprog eller computersprog, i nogen som helst form eller med nogen som helst midler, det være sig elektroniske, mekaniske, magnetiske, manuelle eller på anden måde, eller fremvises til tredje parter uden udtrykkelig, skriftlig tilladelse fra Imagination Technologies Limited.

Copyright
Copyright 2007 door Imagination Technologies Limited. Alle rechten gereserveerd. Geen enkel gedeelte van deze publicatie mag gekopieerd of gedistribueerd, uitgezonden, overgeschreven, opgeslagen in een retrieval system of vertaald in om het even welke menselijke of computertaal, in geen enkele vorm of door geen enkel middel, elektronisch, mechanisch, magnetisch, manueel of anders of bekend gemaakt aan derde partijen zonder de uitdrukkelijke geschreven toestemming van Imagination Technologies Limited.

Trademarks
CHRONOS, textSCAN, PURE, the PURE logo, PURE Digital, the PURE Digital logo, EcoPlus, the EcoPlus logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. The 'DAB Digital Radio' logo and the stylised 'r' mark ® and © Digital One Limited. All other product names are trademarks of their respective companies. Version 4. August 2007.

Warenzeichen
CHRONOS, textSCAN, PURE, das PURE Logo, PURE Digital, das PURE Digital Logo, EcoPlus, das EcoPlus Logo, Imagination Technologies und das Imagination Technologies Logo sind Warenzeichen oder eingetragene Warenzeichen von Imagination Technologies Limited. Alle anderen Produktnamen sind Warenzeichen ihrer jeweiligen Besitzer. Version 4. August 2007.

Marques commerciales
CHRONOS, textSCAN, PURE, le logo PURE, PURE Digital, le logo PURE Digital, EcoPlus, le logo EcoPlus, Imagination Technologies et le logo Imagination Technologies sont des marques commerciales ou des marques déposées de Imagination Technologies Limited. Tous les autres noms de produits sont des marques commerciales de leurs détenteurs respectifs. Version 4 er août 2007.

Marchi
CHRONOS, textSCAN, PURE, il logo PURE, PURE Digital, il logo PURE Digital, EcoPlus, il logo EcoPlus, Imagination Technologies e il logo Imagination Technologies sono marchi o marchi registrati di Imagination Technologies Limited. Tutti gli altri nomi di prodotti sono marchi di proprietà delle rispettive società. Versione 4 agosto 2007.

Varemærker
CHRONOS, textSCAN, PURE, PURE-logoet, PURE Digital, PURE Digital-logoet, EcoPlus, EcoPlus-logoet, Imagination Technologies og Imagination Technologies-logoet er varemærker eller registrerede varemærker, der tilhører Imagination Technologies Limited. Alle andre produktnavne er varemærker, der tilhører deres respektive virksomheder. Version 4. August 2007.

Handelsmerken
CHRONOS, textSCAN, PURE, het PURE logo, PURE Digital, het PURE Digital logo, EcoPlus, het EcoPlus logo, Imagination Technologies en het Imagination Technologies logo zijn handelsmerken of geregistreerde handelsmerken van Imagination Technologies Limited. Alle andere productnamen zijn handelsmerken van hun respectieve firma's. Versie 4 augustus 2007.

Contents

Overview of the controls and connectors	2
Controls – front and remote.....	3
Controls – top and remote.....	3
Connectors and sensors	3
Icons on the display.....	3
Getting started	4
Using your CHRONOS CD.....	5
Changing stations.....	5
Changing the information shown on screen.....	5
textSCAN™ - pause and control scrolling text (DAB & FM)	5
Setting and selecting presets	6
Playing a CD	6
Setting alarms.....	7
Using the sleep timer	9
Changing your radio setup.....	9
DAB only options	9
FM only options	10
CD only options.....	10
General options.....	10
Hints and Tips	12
Technical Specifications	12

 
Disposal of Waste Electrical & Electronic Equipment




This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Overview of the controls and connectors


Front

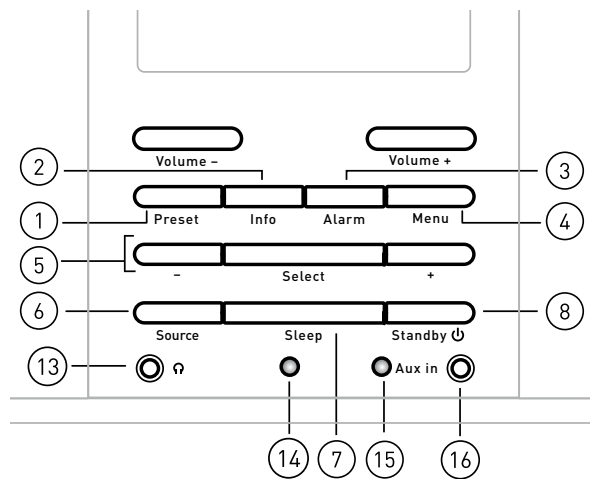

Remote

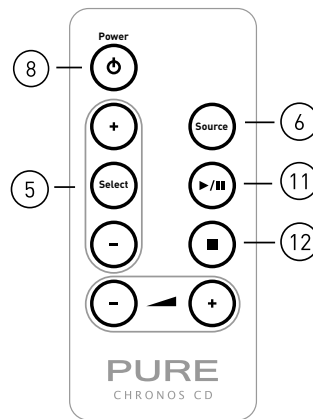 

Top

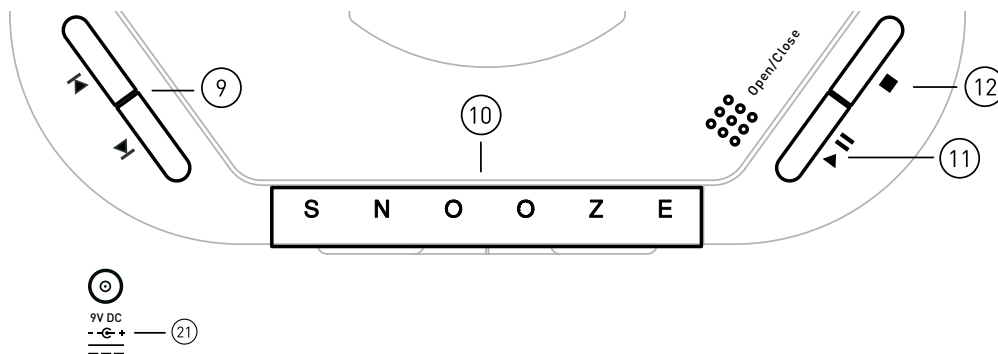 

Icons on the display



Controls – front and remote

1. Set and select preset stations. » Page 6
2. Cycle through on-screen information. » Page 5
3. Set and adjust alarms, in either active or standby. » Page 7
4. Access setup options » Page 8
5. **In DAB** +/- Scroll through radio stations. Press Select to listen. » Page 5
In FM +/- Press and release to manually tune up or down frequency range. Press and hold to scan up or down to the next available station. » Page 5
CD (on remote only) +/- Press to skip tracks. Press and Hold to rewind/fast forward CD or go to Previous/Next folder (MP3).
In menus +/- Press to scroll or change options. Select to confirm. » Page 8
textSCAN Press Select to pause scrolling text. +/- move left and right. » Page 5
6. Switch between DAB, FM, CD (& MP3) or AUX.
7. Set and adjust Sleep timer. » Page 8
8. Switches between On and Standby.

Controls – top and remote

9. **CD/MP3** Press and Release to skip to Previous or Next track. Press and Hold to rewind/fast forward CD or go to Previous/Next folder (MP3).
10. Snooze an alarm. » Page 7
11. Play/Pause CD or MP3. » Page 6
12. Stop CD or MP3 playback. » Page 6

GB

Connectors and sensors


13. 3.5mm headphone socket (mutes speakers).
14. Infrared sensor receives signal from remote control.
15. Light sensor for display auto-dimming (do not cover).
16. Analogue stereo input for auxiliary device.

Icons on the display


17. Alarm active indicators (1,2,3,4). » Page 7
18. Snooze active. » Page 7
19. Sleep timer active. » Page 8
20. DAB, FM, CD (& MP3), AUX indicators.
21. Signal strength indicator (max=6 bars)
22. Stereo indicator.
23. CD (& MP3) play order.

Getting started

 
1. Remove the adhesive tape securing the CD door and remove the CD mechanism transit card from inside the CD compartment.

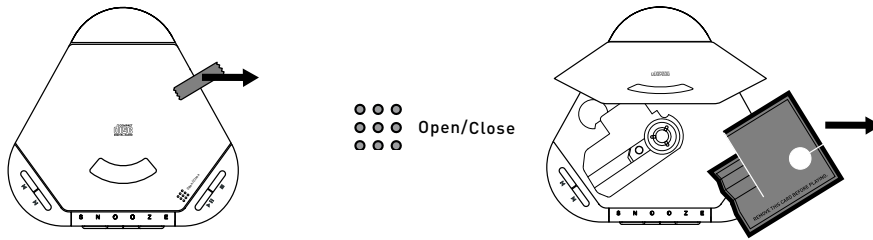

 2. Remove the slip from the battery compartment in the remote. If required for handy storage, affix a supplied adhesive magnetic strip to the recess on the rear of the remote and one to the side of the unit.



 3. Hang the aerial vertically, connect the mains adapter and plug in to your power supply.

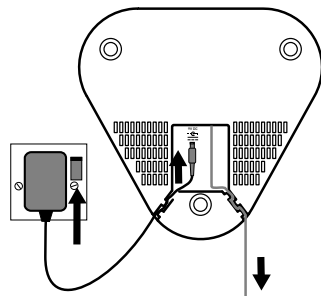

4. Press the Standby button, if necessary, to switch the radio on. An autotune finds the DAB stations available in your area and selects one.



5. Use the +/- buttons to see all the available stations. Push Select to change to another station.



6. Push the Source button to listen to FM, CD or AUX.




Using your CHRONOS CD

Changing stations

DAB



FM

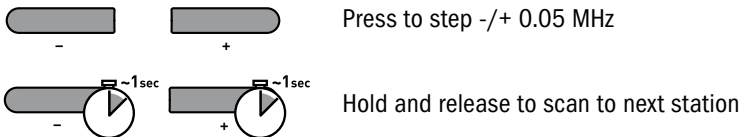

Changing the information shown on screen

 
Info

1. Scrolling text broadcast by most DAB stations and FM (RDS) stations.
2. Content being broadcast e.g. Pop music.
3. DAB Multiplex in which the current station is broadcast.
4. Time and date updated regularly by the most recent DAB station.
5. Frequency for the current station.
6. DAB signal data rate and a stereo or mono indicator.
7. DAB signal quality; 85 to 100 Good, 70 to 84 OK, 0 to 69 poor.

Note The Info button only works in FM if the station has RDS data.

GB

textSCAN™ - pause and control scrolling text (DAB & FM)




Setting and selecting presets


Store up to 30 DAB and FM radio stations in a combined list for easy access.

To set a preset

 Tune to the station you want to store. Press the Preset button and use the +/- buttons to select the Preset number you wish to save the station to. Now **hold down** the Select button **or** the Preset button for 3 seconds until the display changes to a confirmation message, e.g., 'Preset 1 Saved'.

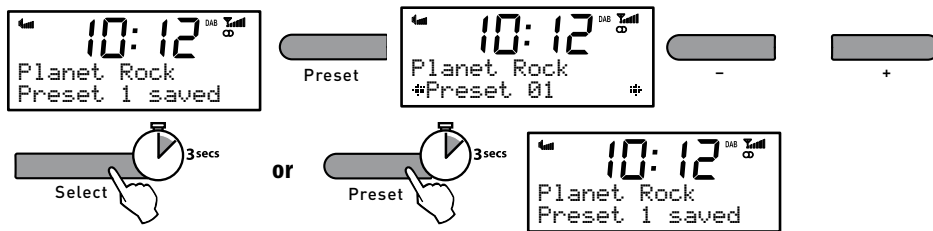


To select a preset


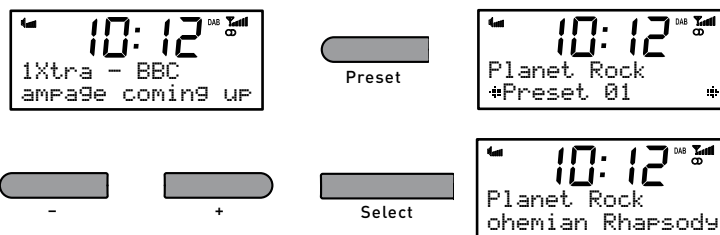 


Playing a CD

 CHRONOS CD can play ordinary audio CDs, CD-R and CD-RW discs. It can also playback MP3 or WMA files from a CD.




Open/Close

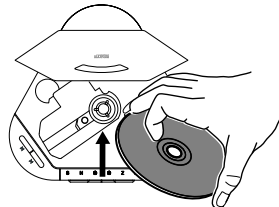  

Open/Close

 Pause/play/stop

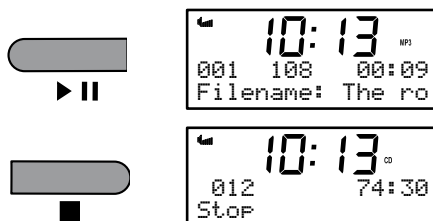


During MP3/WMA playback the screen displays track number, total number of tracks and track time on the display top line and scrolling file information (ID3/ASF text), where available, for File name, Album, Artist and Title on the bottom line (max 32 characters each).


Setting alarms

How to set an alarm

 1. Press the **Alarm** button then select Alarm 1, 2, 3 or 4 with +/- and **Select**. The time, repeat days and on/off status are displayed on the top line.



 
2. Select 'Set alarm' and choose 'On' to turn the alarm on.



Tip

An alarm you've already set can be turned off by selecting 'Set Alarm > Off'. You can reactivate an alarm by selecting 'On'.

 3. Select 'Set time' to set the time you want the alarm to sound. Adjust the hours using +/- and press **Select** to confirm, then adjust the minutes and press **Select** to confirm.



4. Select 'Set days'. Choose when you want the alarm to repeat (press +/- to browse through the options and press **Select** to confirm):

Daily	Every day
Weekday	Monday to Friday, every week
Weekend	Every weekend
Saturday	Every Saturday
Sunday	Every Sunday
Once	The alarm will sound at the time you have selected and not repeat

GB

5. Select 'Set Mode' to choose the type of alarm you want: Radio, Tone or CD.
6. If you select 'Radio', now choose a radio station for the alarm from the preset list using +/- to choose and **Select** to confirm. If you select 'Last used' the alarm will tune to the DAB or FM station you most recently listened to. (To learn how to set presets, see page 6.)
7. Select 'Set volume' and adjust the volume level for the alarm from 1 (very quiet) to 16 (very loud) using the +/- buttons and **Select** to confirm.

That's it! You can see which alarms are currently switched on by looking at the numbered alarm clock icons on the screen, in either active or standby mode.

For example:

Alarm 1 is
currently set



You can change alarm settings by pressing **Alarm** when Chronos CD is switched on or in standby mode, selecting the alarm number and changing settings as described above.

 
To stop an alarm

When an alarm is sounding press either the **Alarm** or **Standby** button to stop the alarm sounding. Pressing **Standby** when a radio alarm is sounding will also switch the unit off.



To snooze an alarm

When an alarm is sounding press the **Snooze** button to silence the alarm for nine minutes (the default snooze time).



Changing the alarm snooze time

 
You can change how long the alarm snoozes for when you press the **Snooze** button during a sounding alarm. Press **Alarm** and scroll to 'Snooze time'. Adjust the snooze time between 5 and 60 minutes.




Using the sleep timer

The sleep timer switches your radio into standby after a number of minutes.

To set/change the sleep timer

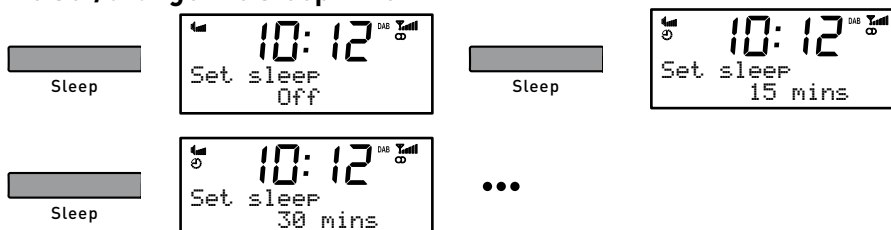

To cancel the sleep timer

 

Changing your radio setup

DAB only options

Station Order

- | | |
|----------------|--|
| Alphanumeric | Lists all stations in alphanumeric order. |
| Active station | Lists active stations first on the station list. |
| Multiplex | Lists stations in groups according to their multiplex. |

GB

Autotune

Scans all DAB frequencies for stations and adds any new ones to the station list. To stop an Autotune press Select.

DRC value

DRC (Dynamic Range Control) value makes the quieter sounds in a DAB broadcast easier to hear at low volume or in a noisy environment. Check with the broadcasters to find out if they use DRC.

- | | |
|----------|--|
| DRC off | Any DRC level broadcast will be ignored. |
| DRC half | DRC level is set to half that sent with the broadcast. |
| DRC full | Applies the DRC level as sent with the broadcast. |

Manual tune

Shows DAB signal level which can help you find the best position for your radio.

1. Use the +/- buttons to scroll through different channels and push Select to choose one (UK stations are in the range 11B to 12D). You see a signal level display. The empty block indicates the minimum required level for reception and the filled blocks indicate the current level.
2. Move your aerial/unit and to try to raise the current level to the empty block or beyond. Once you have a good signal the display will show the multiplex name and add the stations to the station list.
3. Push the Menu button to exit or +/- and Select buttons to change channel.

FM only options

FM stereo mode

Choose from Stereo or Mono - mono may improve audio clarity where stereo signals are weak.

CD only options

CD play order

 
Choose the order CD tracks are played in. Choose from Normal, Repeat one (repeats current track), Repeat folder (tracks in current folder (MP3/WMA) or all (normal CD)), Repeat all (whole CD) or Random.

General options

Display

Press the Menu button and press Select to access the Display menu. You can customise the display settings for when the unit is switched on (active) and in standby. The diagram below shows the available options.

Display

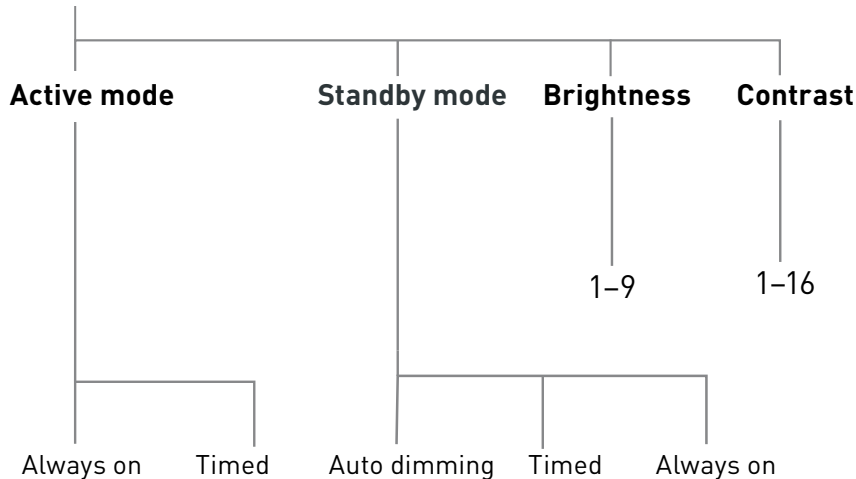

Active mode	Backlight settings that apply when the unit is switched on.
Standby mode	Backlight settings that apply when the unit is in Standby mode.
Timed	The display backlight brightens when a button is pressed then switches off after no button has been pressed for 7 seconds.
Always on	The display is constantly on as defined by your Brightness and Contrast settings.
Auto dimming	The display backlight alters automatically depending on the ambient light conditions.
Brightness	Adjust between 1 (dimpest) and 9 (brightest).
Contrast	Adjust between 1 (low) and 16 (high).

Clock

Clock set

Manually set the time and date if required. If you have good DAB reception these will automatically be updated from the DAB radio signal.

12/24 Hour set

Choose 12 hour or 24 hour clock display.

Audio

Set the Treble and Bass levels.

Hints and Tips

(<</>>) Secondary DAB services

Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name in the station list.

(?) Inactive or unavailable DAB stations

Inactive or unavailable stations are those which appear on the station list but are not currently available. Inactive stations have a '?' before their name on the station list. If you select a station which has this symbol, your radio tries to tune in or returns to the previous station.

Display says 'No stations available'

Check that your aerial is fully extended. Use Autotune to search for stations. Try adjusting your aerial or radio position.

The screen is very dark

Check the Display settings. Check that the light sensor is not obstructed if Auto dimming is selected.

Resetting your radio

Resetting your radio removes all presets, stored stations and favourite station settings and resets all options to defaults. To reset:

1. Press and hold the Menu button for three seconds.
2. Press Select to confirm the reset or press no buttons to cancel the reset.

Technical Specifications

DAB	Fully compliant with ETS 300 401 and capable of decoding all DAB transmission modes 1-4 up to and including 192 kb/sec.
CD player	Compatible with CD, CDRW, MP3, WMA
Speakers	Two 3 inch x 1.5 inch oval, 8 ohm impedance.
Frequency range (MHz)	DAB Band III 174-240, DAB L-Band 1452-1491, FM 87.5-108
Input connectors	9V DC power adapter socket (230 V adapter supplied) 3.5 mm Aux in for connection of auxiliary devices.
Output connectors	3.5 mm socket for headphones.
Remote control	Infrared remote control.
Aerial	Wire aerial attached.
Mains power supply	100-240 V AC to 9V (1.5 A) DC external power adapter (supplied).
Power consumption	In standby: 0.71W. In operation: 2.5W
Approvals	CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC).
Dimensions	195 mm (width) x 125 mm (height) x 185 mm (depth).



Warranty information

Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please visit www.pure.com/register to register your product with us. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual. If you need to return your product please use the original packaging and include all parts and accessories. We reserve the right to refuse incomplete or badly packaged returns.

Garantie-Informationen

Imagination Technologies Ltd. garantiert dem Endbenutzer, dass dieses Produkt für die Dauer von zwei Jahren ab Kaufdatum bei normalem Gebrauch frei von Schäden an Material oder Verarbeitung ist. Diese Garantie umfasst Ausfälle aufgrund von Herstellungs- und Konstruktionsfehlern; sie gilt nicht für Unfallschäden, wie auch immer verursacht, Verschleiß, Fahrlässigkeit und Veränderung oder Reparatur durch von uns nicht autorisierte Personen. Registrieren Sie Ihr Produkt bei uns unter www.pure.com/register. Sollten Sie mit Ihrem Gerät ein Problem haben, wenden Sie sich an Ihren Verkäufer oder den PURE Support. Die Adresse finden Sie auf der Rückseite dieser Bedienungsanleitung. Verwenden Sie bei Rücksendungen bitte die Originalverpackung und fügen Sie alle Teile und das vollständige Zubehör bei. Wir behalten uns das Recht vor, unvollständige oder unzureichend verpackte Rücksendungen abzulehnen.

Garantie

Imagination Technologies Ltd. garantit à l'utilisateur que le présent produit est exempt de défauts en termes de matériaux et de main-d'œuvre, dans le cadre d'une utilisation normale, pour une période de deux ans à compter de la date d'achat. La présente garantie couvre les pannes dues à un défaut de conception ou de fabrication; elle ne prend pas en compte les dommages accidentels, quelle que soit leur cause, l'usure normale du produit, ainsi que tous dommages dus à la négligence, à la modification, au réglage ou à la réparation effectuée(e) sur l'appareil sans notre autorisation. Visitez le site www.pure.com/register pour enregistrer votre produit auprès de nos services. En cas de problème avec votre appareil, veuillez contacter votre fournisseur ou le centre d'assistance PURE, à l'adresse indiquée au dos du présent manuel. Si vous souhaitez retourner votre article, veuillez le renvoyer dans son emballage d'origine et ne pas oublier de retourner également tous les éléments/accessoires du produit. Nous nous réservons le droit de refuser tout article retourné qui serait incomplet ou mal emballé.

Informazioni sulla garanzia

Imagination Technologies Ltd. garantisce all'utente finale che il presente prodotto è esente da difetti di materiale e fabbricazione in condizioni normali di utilizzo per un periodo di due anni a partire dalla data di acquisto. La presente garanzia copre i danni dovuti a difetti di fabbricazione o progettazione; non si applica in casi quali danni accidentali, in qualsiasi modo siano stati provocati, usura, negligenza, regolazione, modifica o riparazione non autorizzate. Visitare il sito www.pure.com/register per registrare il prodotto. In caso di problemi relativi all'unità, contattare il proprio fornitore oppure contattare il Supporto tecnico PURE all'indirizzo indicato sul retro del presente manuale. Nel caso in cui il prodotto debba essere restituito, è necessario utilizzare l'imballaggio originale, includendo tutte le parti e gli accessori. Ci riserviamo il diritto di respingere prodotti restituiti con l'imballaggio incompleto o danneggiato.

Garantioplysninger

Imagination Technologies Ltd. garanterer over for slutbrugeren, at dette produkt ikke er fejlbæftet, hvad angår materialer og håndværksmæssig udførelse ved normal brug i to år fra købsdatoen. Denne garanti dækker sammenbrud, der skyldes fremstillings- eller designfejl. Den dækker ikke i tilfælde, hvor enheden beskadiges som følge af hændeligt uheld, uanset hvordan dette sker, samt slitage, uagtsomhed, justering, ændring eller reparation, som ikke er godkendt af os. Besøg www.pure.com/register for at registrere produktet hos os. Hvis der skulle opstå problemer med enheden, bedes du kontakte leverandøren eller PURE Support på adressen, der er angivet på bagsiden af denne vejledning. Hvis det bliver nødvendigt at returnere dit produkt, skal du bruge den originale emballage og vedlægge alle komponenter og tilbehørsdele. Vi forbeholder os ret til at afvise ufuldstændige eller dårligt emballerede produkter.

Informatie over de waarborg

Imagination Technologies Ltd. waarborgt de eindgebruiker dat dit product vrij is van defecten in materialen en werkuren bij normaal gebruik voor een duur van twee jaar vanaf de datum van aankoop. Deze garantie dekt defecten door productie- of ontwerpfouten; het is niet van toepassing in gevallen als accidentele schade, hoe ook veroorzaakt, slijtage, onachtzaamheid, instelling, wijziging of reparatie die door ons niet werd goedgekeurd. Bezoek www.pure.com om uw product bij ons te registreren. Indien u een probleem hebt met uw apparaat, gelieve uw leverancier te contacteren of contacteer PURE Support op het adres op de achterzijde van deze handleiding. Als u uw product moet retourneren, gebruikt u de oorspronkelijke verpakking en voegt u alle onderdelen en accessoires bij. Wij behouden het recht om onvolledige of slecht verpakte retourzendingen te weigeren.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Ausschlusshinweis

Imagination Technologies Limited gewährt keine Garantien für den Inhalt dieses Dokuments und lehnt insbesondere implizierte Garantien für die allgemeine Gebrauchstauglichkeit bzw. die Eignung für spezielle Zwecke ab. Weiterhin behält sich Imagination Technologies Limited das Recht vor, diese Publikation von Zeit zu Zeit zu überarbeiten und zu ändern, ohne dass daraus eine Verpflichtung für Imagination Technologies Limited entsteht, irgendeine Person oder Organisation von solchen Änderungen in Kenntnis zu setzen.

Avis de non-responsabilité

Imagination Technologies Limited refuse toute représentation ou garantie vis-à-vis du contenu du présent document et refuse spécifiquement toute garantie implicite de valeur marchande ou d'adéquation à un usage spécifique. En outre, Imagination Technologies Limited se réserve le droit de réviser la présente publication et d'y apporter des modifications, quand elle le souhaite, sans obligation de sa part de notifier toute personne ou organisation desdites révisions ou modifications.

Dichiarazione di non responsabilità

Imagination Technologies Limited non si assume alcuna responsabilità rispetto al contenuto del presente documento, in particolare non riconosce nessuna garanzia implicita di commerciabilità o idoneità per uno scopo specifico. Inoltre, Imagination Technologies Limited si riserva il diritto di revisionare la presente pubblicazione e di apportarvi modifiche periodiche senza alcun obbligo di notifica a qualsiasi persona o organizzazione.

Ansvarsfraskrivelse

Imagination Technologies Limited afgiver ingen garantier eller erklæringer med hensyn til indholdet af dette dokument og fralægger sig i særdeleshed eventuelle stilltende garantier for salgbarhed eller egnethed til et bestemt formål. Endvidere forbeholder Imagination Technologies Limited sig ret til at revidere denne publikation og foretage ændringer fra tid til anden, uden at Imagination Technologies Limited er forpligtet til at underrette nogen person eller organisation om sådanne revideringer eller ændringer.

Vrijwaring

Imagination Technologies Limited geeft geen verklaring of garanties met betrekking tot de inhoud van dit document en wijst specifiek elke verantwoordelijkheid af met betrekking tot om het even welke onuitgesproken garanties naar verhandelbaarheid of geschiktheid voor enig bijzonder doel. Daarenboven behoudt Imagination Technologies Limited zich het recht voor om deze publicatie te reviseren en af en toe veranderingen aan te brengen zonder de verplichting voor Imagination Technologies Limited om personen of organisaties

www.pure.com

PURE Digital
Imagination Technologies Ltd.
Home Park Estate
Kings Langley
Herts, WD4 8DH
UK

 +44 (0)1923 277477 support
+44 (0)1923 277488 sales
 +44 (0)1923 270188
 support@pure.com
sales@pure.com

PURE Digital
Karl-Marx Strasse 6
64589 Stockstadt/Rhein
GERMANY

 +49 (0)6158 878872 sales
 +49 (0)6158 878874
 sales_gmbh@pure.com

PURE Digital - Vertrieb über:
TELANOR AG
Unterhaltungselektronik
Bachstrasse 42
4654 Lostorf
SCHWEIZ/SWITZERLAND

 +41 (0)62 285 95 95 sales
 +41 (0)62 285 95 85
 info@telanor.ch
www.telanor.ch



EcoPlus



CHRONOS CD is a member of the PURE EcoPlus™ product family. All EcoPlus products are designed and manufactured to minimise their environmental impact.

- Documentation is printed on 100% recycled paper using soya-based ink.
- The retail carton protecting your product is printed on at least 70% recycled card finished using a water-based varnish and sized for maximum transport efficiency.

For more information please visit www.pure.com/ecoplus

Powered by

Imagination
TECHNOLOGIES

101FW

