

PURE

OASIS



DAB
Digital Audio Broadcasting

digital **radio**

USB
UPGRADEABLE


ChargePAK
INSIDE

Getting started

1

Attach aerial


Remove the aerial from its storage slot on the rear of your unit and screw into the Aerial socket on the top panel.

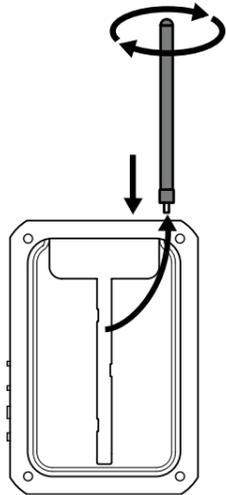

2

Connect power


Open the Power socket cover on the side panel, insert the adapter plug and connect to the mains supply. The light on the front panel will start flashing indicating that the battery is being charged.

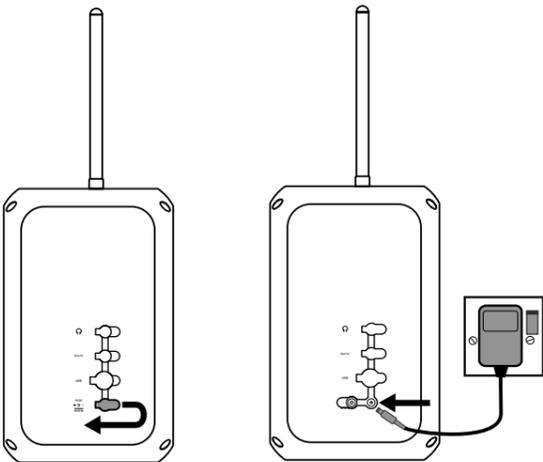

3

Switch on

Press the Power button to switch your Oasis on. An autotune is performed to find all the stations available in your area, this may take around a minute. Once finished your Oasis will tune to the first station alphabetically.

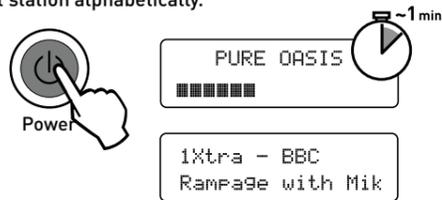

4

Change station

Turn the Tune knob to show all of the stations available and push Tune when you see the name of the station you want to tune to.




Controls



Each press of the Info button changes the text shown on the bottom of the screen between:

Scrolling text	The default mode, broadcast by most stations.
Program type	Type of content being broadcast.
Multiplex	Multiplex the current station belongs to. Multiplexes are groups of stations broadcast by an operator.
Time and date	Time and date updated regularly from the current multiplex.
Channel	Multiplex channel and frequency.
Mode	Stereo or mono indicator and signal data rate. This rate is set by the broadcaster to suit the type of material. Higher data rates generally mean higher quality.
Signal quality	From 85 to 100 indicates good reception, 70 to 84 borderline reception and 0 to 69 poor reception.
Power state	Shows if running from an External supply (mains adapter or car charger) or indicates state of battery charge from Battery high, to Battery medium and Battery low. When battery power gets low enough to start affecting reception you see 'Battery very low' flashing on the screen and the unit will eventually switch off. Connect an external supply to begin battery charging and resume listening.

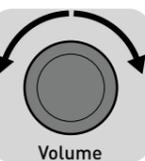

Turn the Volume knob to adjust the volume from the speaker or headphone socket.



Press the Power button to switch your radio on or off. If connected to the mains the green power light around the power button will light up. The power light will flash if the battery is being charged and stop flashing when fully charged.



Press and hold a numbered preset button for around three seconds to store a station to that button. Press and release to select and listen to a preset.



Press Menu and turn the Tune control to browse the following six setup menu options. Push the Tune knob to select an option.

Station order

Changes the order of stations on your station list. Turn the Tune knob to scroll through the following options and push to select one:

Alphanumeric Displays all stations in alphanumeric order.

Fav station Displays your ten most listened to stations at the top of the station list and the rest below, in alphanumeric order. Your favourite stations are displayed with a ♥ next to their names.

Active station Displays active stations at the top of the station list and inactive ones at the bottom in alphanumeric order. Inactive stations are those on the station list but not currently available, marked with a '?'.

Multiplex Lists stations in groups according to their multiplex. Multiplexes are groups of stations broadcast by an operator.

Trim stn. list Removes inactive stations from the station list.

LCD backlight

Controls the screen backlight. Turn the Tune knob to scroll through the following options and push to select one:

On Backlight on all the time. (Decreases battery life)

Off Backlight off.

Timed off Backlight will turn on when a button is pressed and off again after no button pressed for around five seconds.

Autotune

Scans the full range of digital frequencies in Band III and updates the station list with any new stations found.

Manual tune

Provides a signal level display which you can use to try and find the best position for your radio to receive a particular multiplex.

1. Turn the Tune knob to scroll through different channels and push to select one (UK stations are in the range 11B to 12D). You see a signal level display. The empty block shows the minimum level for reception and the filled blocks show the current level.

2. Move your radio and try to raise the level to the empty block or beyond. Once you have a good signal the display will show the multiplex name and add any new stations to the station list.

3. Push the Menu button to exit manual tuning or turn the Tune knob and push to select another channel.

Note You can also display the signal level at any time for a station you are listening to by pushing the Tune knob.

DRC value

DRC (Dynamic Range Control) value makes the quieter sounds in a broadcast easier to hear. The DRC level of a broadcast is set by the station and sent with the signal. At the time of writing in the UK only BBC Radio 3 and 4 regularly use DRC. Turn the Tune knob to scroll through and push to switch DRC between off, half or full.



Sw upgrade

Displays the version number of the software installed in your radio and enables you to upgrade the software in your Oasis using a PC connected to the USB socket. To install an upgrade follow the instructions provided with the software. Upgrades may be issued to provide enhanced functions or improve performance. Register your product and include an e-mail address to receive notification of software updates or visit our website at www.pure.com/support. To exit the Software upgrade menu press the Menu button again.

Resetting your radio

Resetting your Oasis removes all presets, stored stations and favourite station settings and resets all options to defaults. To reset:

1. Press and hold the Menu button for three seconds. The screen shows 'Press Tune to confirm reset'.
2. Push the Tune knob to confirm the reset or press no buttons to cancel the reset.

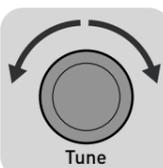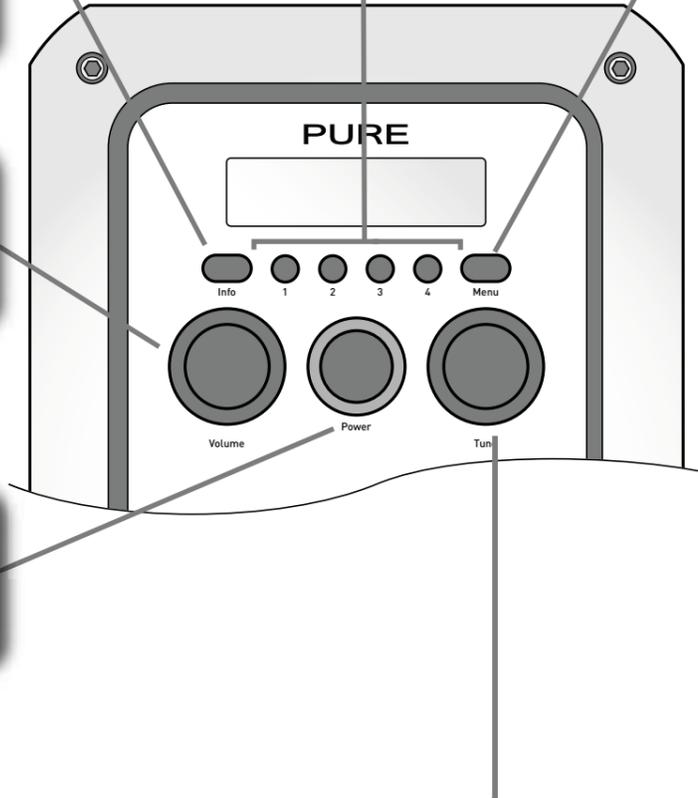


1. Turn the Tune knob to browse through stations or press the Menu button first to browse through menu options on the bottom line of the screen. The current station or option selected is shown on the top line of the screen as you browse.




2. Push the Tune knob while looking at the station list or in a menu to select the station or menu option shown on the bottom line of the screen.

Push the Tune knob while listening to a station to display the signal strength for the multiplex that the current station belongs to.

Connectors

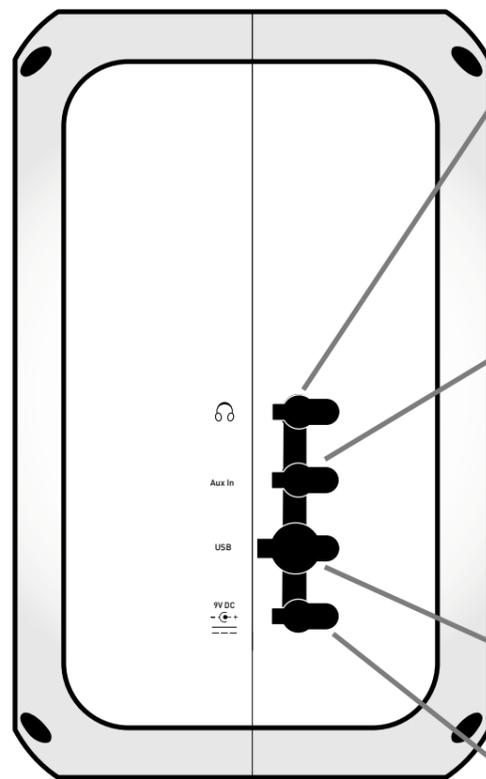


Open the rubber cover and connect a pair of stereo headphones to this 3.5mm socket. The speaker will be muted when headphones are connected.

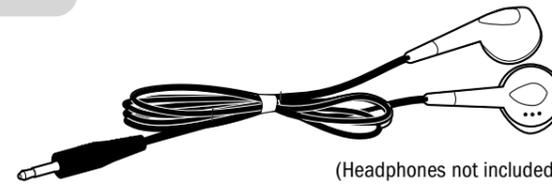


Aux In

Open the rubber cover and connect an auxiliary source such as an iPod to this 3.5mm socket. When connected the auxiliary source will be heard through the speaker. Set the volume high on your auxiliary device then adjust volume on your Oasis as required.

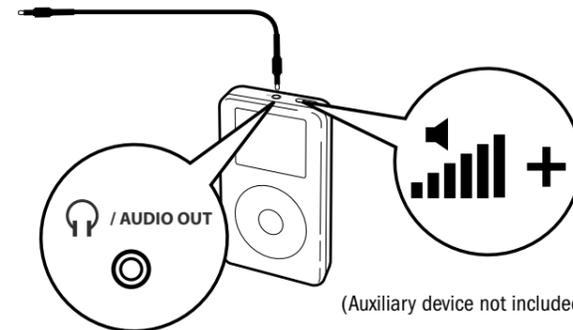


USB

Open the rubber cover and connect a suitable A-to-B USB cable to this Type B USB socket. This enables you to upgrade the software in your radio by connecting to a PC.

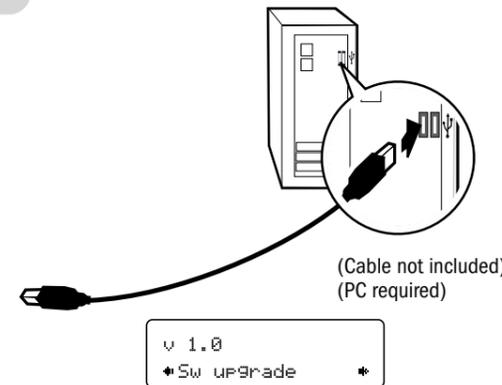

9V DC

Open the rubber cover and connect the supplied power adapter to use mains power or the optional car power adaptor. When power is connected to this socket the internal battery will be charged.

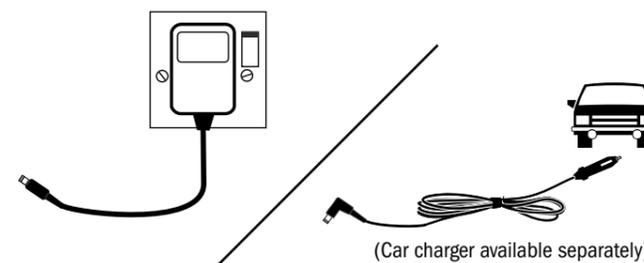

LCD Key

Below is a key to some of the symbols or messages you may see on the screen.



Secondary services accompany some stations, providing extra information or alternative content and may only be broadcast at certain times. If a station has secondary services available, the station shows '>>' next to its name in the station list and the secondary service appears next to the station in the list. A secondary service has a '<<' before its name.



Inactive or unavailable stations are those which appear on the station list but are not currently available because either you are outside the broadcast area, have lost reception or the station is not currently broadcasting. Unavailable stations have a '?' before their name on the station list. If you select a station which has this symbol and it is still not available, you return to the last station you were listening to.



Favourite stations are the ten stations you listen to most. Favourite stations have a ♥ next to their names on the station list.

1,2,3,4

Preset stations saved to the four preset buttons show a number next to their names on the station list.

Battery very low Flashes on screen when the battery power is getting low. Press the Info button to temporarily remove the message from the screen. Connect the power adapter to recharge the battery.



Safety Sicherheit · Sécurité · Sicurezza · Seguridad · Veiligheid · S kerhet · Sikkerhed

Warranty void if casing is opened
Weather and splash proof - do not immerse in water
Use only the supplied mains adapter

To replace the battery pack, contact your local dealer or PURE Digital directly on +44 (0) 1923 277477

Bei  ffnen des Geh uses erlischt die Garantie
Regen- und Spritzwassergesch tzt - nicht in Wasser tauchen
Nur das mitgelieferte Netzteil verwenden
Wenden Sie sich zum Austausch der Batterie an Ihren H ndler oder direkt an PURE Digital unter +44 (0) 1923 277477

La garantie est annul e si le bo tier est ouvert.
R siste aux intemp ries et aux  claboussures ; ne pas immerger dans l'eau.
Utiliser uniquement l'adaptateur secteur fourni.
Pour remplacer le pack de batteries, contactez votre revendeur ou appelez PURE Digital en formant le +44 (0) 1923 277477.

La garanzia decade in caso di apertura del telaio
Protezione contro gli agenti atmosferici e gli spruzzi - non immergere in acqua
Utilizzare solo l'adattatore di rete fornito
Per sostituire il gruppo batteria, contattare il rivenditore locale o PURE Digital al numero +44 (0) 1923 277477

La apertura del chasis anula la garant a
Resistente a la intemperie y a las salpicaduras. No sumergir en agua
Utilizar  nicamente el adaptador de corriente suministrado
Para cambiar la bater a, p ngase en contacto con su distribuidor local o directamente con PURE Digital llamando al +44 (0) 1923 277477

De garantie vervalt als de behuizing wordt geopend.
Weerbestendig en spatwaterdicht - niet onderdompelen in water.
Gebruik alleen de bijgeleverde netstroomadapter.
Voor het vervangen van de batterij neemt u contact op met uw lokale verkoper of rechtstreeks met PURE Digital op het nummer +44 (0) 1923 277477.

Garantin blir ogiltig om h ljet  ppnas
Vind- och regnt t samt st nkt t - f r ej neds nkas i vatten
Anv nd endast den medf ljande n tadaptern
N r du beh ver byta batteripack kontaktar du din lokala  terf rs ljare eller PURE Digital direkt p  +44 (0) 1923 277477

Garantien bliver ugyldig, hvis kabinettet  bnes
Vind- og regnt t samt st nkt t - m  ikke neds nkes i vand
M  kun bruges med den medf lgende lysnetadapter
Kontakt den lokale forhandler eller PURE Digital direkte p  nummer +44 (0) 1923 277477, n r batteripakken skal udskiftes.

Warranty information
Imagination Technologies Ltd. warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase (one year for the ChargePAK). This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Please visit www.pure.com/register or return your warranty card to register your product with us. Should you have a problem with your unit please contact your supplier or contact PURE Support at the address shown on the rear of this manual.

Copyright
Copyright 2005 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

www.pure.com

PURE Digital
Imagination Technologies Ltd.
Imagination House
Home Park Estate
Kings Langley
Herts
WD4 8LZ, UK

 +44 (0) 1923 277477 support
+44 (0) 1923 277488 sales

 +44 (0) 1923 270188

 support@pure.com
sales@pure.com

Powered by



Imagination
TECHNOLOGIES

PURE



12M87

