


DRX-601EX

Owner's manual

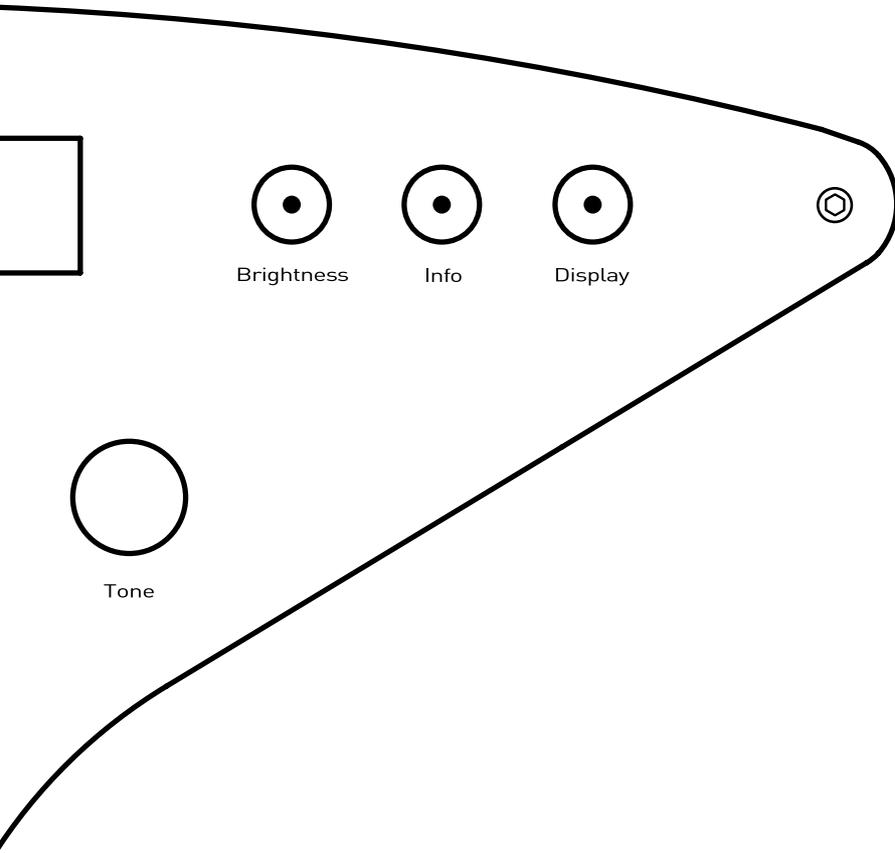

PURE
by VideoLogic

Safety instructions

Keep the unit away from heat sources.

Do not use the unit near water.

Avoid objects or liquids getting into the unit.

Unplug the power lead if the unit will not be used for a long period.

Mains safety

The unit uses a 230V AC 50 Hz mains supply.

When replacing the fuse in the supplied moulded mains plug, always refit the integral fuse holder/cover. Always fit a 3 amp fuse either in the plug or adapter, or at the distribution board.



If you want to change the fuse in your digital radio, replace it with the same type as stated on the unit. Access the fuse by removing the mains lead, and turning the fuse holder anticlockwise using the slot. The fuse holder will pop out enabling replacement.

Do not attempt to remove any screws or open the unit.

No user serviceable parts are inside.

For your safety, always obey the warning:

CAUTION - RISK OF ELECTRIC SHOCK - DO NOT OPEN COVER

Copyright

Copyright 2001 by Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Videologic, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited. All other product names are trademarks of their respective companies.

Credits

This manual was written by Bruce Murray and illustrated by Philippa Page. It is a product of Videologic Systems, Imagination Technologies Ltd., Home Park Estate, Kings Langley, Hertfordshire WD4 8LZ, UK.

Edition 1 November 2001

Contents

Introduction	1
Unpacking	2
Controls and Connectors	3
Setting up	5
Using your DRX-601EX.....	7
Using the remote control	10
Guide to Digital Radio	12
Troubleshooting	14
Technical Specifications	16
Aerial advice	18
Getting Help.....	19
Accessories	19
Index	20

Introduction

Thank you for choosing the DRX-601EX digital radio.

This owner's manual provides information on setting up your unit, instructions on using it and details of the accessories and support available.


Using the same electronics as the multi-award winning DRX-601ES hi-fi tuner, the DRX-601EX is a mains-powered stand-alone portable radio for your bedroom, kitchen or study, containing twin high performance bass/mid speakers with concentric tweeters for superb audio quality. DAB radio provides high-detail, digital-quality sound; supports over 60 national, local and digital-only channels and enables broadcasters to provide additional text information for news headlines and programme details.

Using real wood veneer and inlaid aluminium, the DRX-601EX is beautifully finished and sounds as good as it looks. An input connector enables you to connect other devices such as a portable CD or MiniDisc player and digital and analogue outputs are also provided enabling you to connect to an external amplifier or record programmes.

If you are new to digital radio see our quick guide on page 12.

Unpacking

This section lists the contents of your DRX-601EX package. Contact us if any items are missing or damaged.

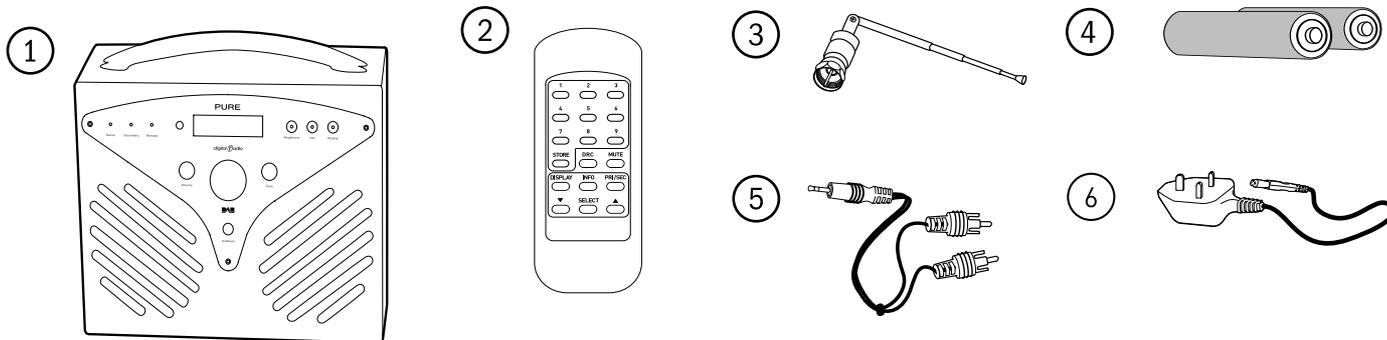


Package contents

1. DRX-601EX digital radio unit
2. Infrared remote control handset
3. Telescopic DAB indoor aerial
4. Two AAA batteries for the remote control handset
5. 3.5mm jack to stereo phono cable
6. Power lead with moulded 3-pin plug


Controls and Connectors

This section provides information on the controls and connectors available on the front, side and rear panels of your DRX-601EX. For information on the remote control, see page 10.


Front Panel

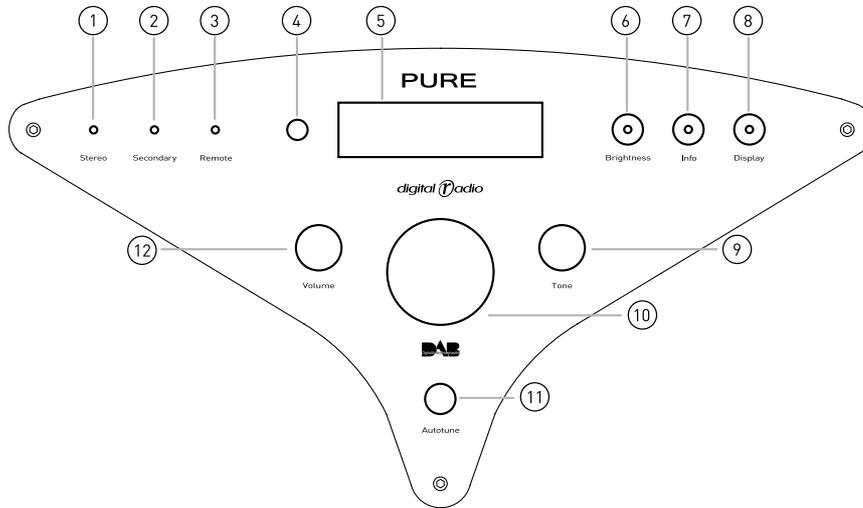

Side Panel

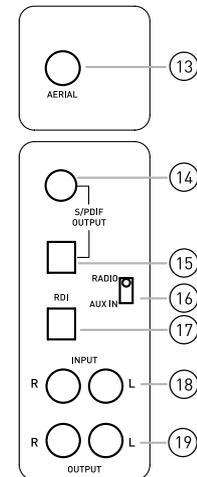

Rear Panel

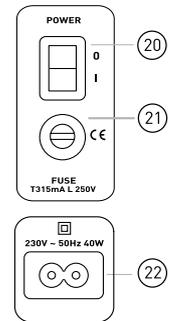

Front Panel

- ① **Stereo** LED indicates when stereo service is being received, see page 8
- ② **Secondary** LED indicates whether secondary services are available, see page 11
- ③ **Remote** LED indicates remote control activity
- ④ **Remote sensor** picks up the infrared signal from the remote
- ⑤ **Backlit LCD display**
- ⑥ **Brightness** button changes the display brightness
- ⑦ **Info** button changes the information mode of the display, see page 9
- ⑧ **Display** button changes the main display mode, see page 8
- ⑨ **Tone** control, adjusts bass/treble level
- ⑩ **Tuning** button selects the digital radio service, see page 8
- ⑪ **Autotune** button provides one touch tuning, see page 7
- ⑫ **Volume** control

Side Panel

- ⑬ **Aerial** socket
- ⑭ **S/PDIF** co-axial digital output, see page 6
- ⑮ **S/PDIF** optical digital output, see page 6
- ⑯ **RADIO/AUX IN** switch, switches between DAB radio and any auxiliary source connected to the INPUT connectors.
- ⑰ **RDI** (Receiver Data Interface) socket, see page 6
- ⑱ **INPUT** connectors for connecting an auxiliary device such as portable CD player or MiniDisc
- ⑲ **OUTPUT** to amplifier line-level stereo (analogue)

Rear Panel

- ⑳ **POWER** on/off switch
- ㉑ **FUSE** holder
- ㉒ **Mains socket** for mains lead

Setting up


This section provides information on connecting your aerial and connecting to any other devices. Connector sockets are provided on the side and rear panels of your DRX-601EX. Before connecting other devices to your DRX-601EX, switch both devices off. For a quick setup you can connect just your aerial and power supply - the other connections listed are optional and will not prevent normal operation of the unit.



Connecting your aerial


You need to connect either the supplied telescopic indoor aerial or an external DAB aerial to your DRX-601EX to receive digital radio transmissions. To find out about DAB coverage in your area, see the list of useful addresses on page 13.

1. Screw the aerial plug onto the F-type aerial connector on the side of your digital radio.
2. For the best reception, if using the indoor aerial supplied, extend the aerial fully. You may have to experiment with different angles to find the best reception for particular services. Just like with FM reception, you may find that you want to move the radio around your living space to find the best location for reception - near a window should provide optimum reception.

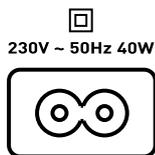

Connecting to power supply


Once you have connected your aerial, and any other audio devices, connect one end of the supplied power lead to the socket on the side of your digital radio and connect the other end to a wall outlet.

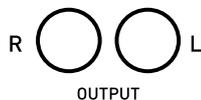

Connecting to an external amplifier

You can connect your DRX-601EX to an external amplifier. This may be a stand alone unit or it may be built into your existing hi-fi system or powered speakers.

Connect the OUTPUT sockets to the Tuner-in sockets on the back of your amplifier using a stereo phono cable.

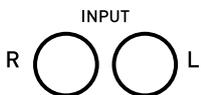


Connecting to an auxiliary source

If you have an existing radio tuner, portable CD/MiniDisc player or similar you can connect it through your DRX-601EX. When the source selection switch is set to AUX IN, you will hear the auxiliary device through the speakers on your DRX-601EX.

Connect the INPUT sockets to the output socket(s) on your auxiliary device using the supplied 3.5mm to stereo phono cable or a stereo phono cable as appropriate.

Switch the source selection switch on the side panel to the AUX IN position.

Note To resume listening to digital radio set the source selection switch back to the RADIO position.

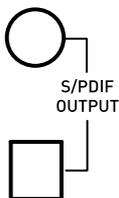

Connecting to digital devices

Your DRX-601E/ES can provide digital audio output for connection to digital devices such as MiniDisc, CD-R or DAT recorders or the digital input on your amplifier.

1. Locate the S/PDIF sockets on the back of your DRX-601E/ES and the digital-in socket on your digital device.
2. Connect the devices via either the coaxial or the optical socket using a suitable cable. Suitable connecting cables are available from VideoLogic, see page 19 for details.

RDI




Connecting to an external decoder

The RDI (Receiver Data Interface) optical connector provides access to raw multiplex data. This may be used in the future to connect to an external decoder or computer for access to extra services.

Using your DRX-601EX

This section provides information on using your DRX-601EX including tuning, selecting a service and altering the displayed information.

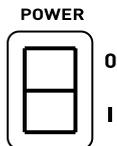

Switching on and off

Before switching on for the first time, check all connections and ensure that the volume is turned down.

Push the power switch on the side of your DRX-601EX to the **I** (on) position to switch the unit on or to the **0** (off) position to switch the unit off. The LCD screen will light up when the unit is switched on.

You should now perform the tuning operation described below.



Autotune

Tuning

Tuning the DRX-601EX is very simple. In most cases you only need to perform this operation once, when you first set up the unit. The tuning facility has two modes:

Rapid - scans all frequencies in the UK channel allocation. This should take less than a minute.

Full - scans the full range of digital frequencies in Band III. This may take several minutes.


1. Ensure your DRX-601EX is switched on and your aerial is connected and extended.
2. Push and release the **Autotune** button on the front of your DRX-601EX once for rapid and twice for full mode.
Note You can cancel Autotune by pushing the **Autotune** button again during the tuning process.

The display will indicate tuning is underway. When finished, the name of the first service found will be shown on the top line of the display and you will hear it through the speakers. All the services found are now stored in the unit and you can select a service as described below.

Note If no services are found the display will show the message NO ENSEMBLES. Check your aerial connection and positioning and try the tuning process again.

You may want to repeat this procedure in the future if you change the unit or aerial position or if you want to receive a newly introduced service.

Note If reception is poor, check the signal strength and try repositioning your aerial using the signal strength indicator as described on page 9.

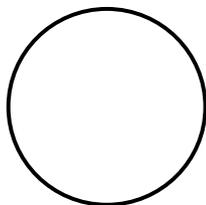

Selecting a service

Once you have tuned your DRX-601EX as explained above you can select the digital radio service you want to listen to. You use the large turn-and-push knob to select a service.

1. Rotate the large tuning knob to see the names of other stored services on the bottom line of the display. Stop when you find the service you want to listen to.
2. Push and release the large tuning knob to listen to the service you have selected.

If the service you select is in stereo, the Stereo LED will light up. If the service you select has one or more secondary services available, the Secondary LED will light up.

See page 12 for information on primary and secondary services and see page 10 for details on selecting primary or secondary services.



Brightness



Info



Display

Changing the display mode

The DRX-601EX display feature has four modes which enable you to view different parts of the broadcast data on the bottom line of the display.

Press the **Display** button on the front panel of your DRX-601EX and repeat or hold down to cycle through the four different display modes.

```
Classic FM
Relax It's Classic
```

Scrolling text

The default mode, displays scrolling text messages which accompany the audio, where available.

```
Classic FM
Serious Classics
```

Program Type

A label describing the type of content being broadcast by the service.

```
Classic FM
Digital1 Network
```

Multiplex name

Displays the name of the Multiplex in which the current service is found. See the Guide to Digital Radio section on page 12 for information on Multiplexes.

```
Classic FM
11D 222.06 MHz
```

Technical Information


Displays the channel label and centre frequency for the current multiplex. See the Guide to Digital Radio section on page 12 for information on channels and digital radio frequencies.



Viewing extra information


The DRX-601EX has two information modes which enable you to view extra information about the current multiplex.

Press the **Info** button on the front panel of your DRX-601EX and repeat or hold down to cycle through the two different information modes. Press the **Display** button to return to normal display mode.

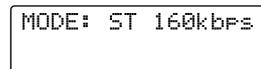

Mode

Displays the mode of the current service, Stereo (ST) or Mono (MN) and the data rate at which the audio signal is being transmitted. This rate is set by the broadcaster to suit the type and quality of material being transmitted.

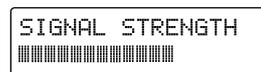

Signal strength


Displays the strength of the signal for the current multiplex. Maximum strength is indicated by 16 bars across the display. **Note** If sound quality is poor, try repositioning your aerial whilst observing the signal strength indicator, you may be able to increase reception quality.



Changing the display brightness

The DRX-601EX has four levels of brightness which you can alter to suit your room's light levels.

Press the **Brightness** button on the front panel of your DRX-601EX and repeat or hold down to cycle through the four levels of brightness available.

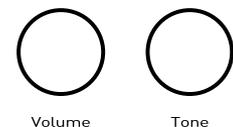


Adjusting the volume and tone

Once you have tuned your digital radio as explained above you can adjust the volume and tone to your preferred levels. You use the **Volume** and **Tone** controls to adjust these levels.

1. Adjust the volume level using the volume control.
2. Adjust the tone level from low (more bass) to high (more treble).

Using the remote control

The infrared remote control provides access to the main functions of your DRX-601EX and also advanced facilities such as presets and dynamic range control. Before using your remote, insert the supplied batteries. Aim the remote control at the sensor on the front panel of your DRX-601EX.

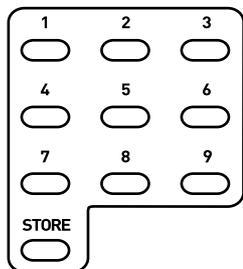

Preset buttons

The numbered buttons (1-9) and the **STORE** button enable you to store your favourite radio services for one-touch access.

To store a service

While listening to the service you want to store.

1. Press the **STORE** button.
The display on your DRX-601EX shows **1-9?**
2. Press a numbered button to store the service under that number.

To recall a previously stored channel

Press the numbered button under which you stored the service.



DRC button

The **DRC** Dynamic Range Control button enables you to alter the dynamic range of the received audio (dependent on broadcast material) by making the quieter sounds in a broadcast more audible. This may be useful in noisy environments or particularly quiet parts of programmes.

Press the **DRC** button, the display indicates whether DRC is available for the current service, if DRC is available, press the **DRC** button again to toggle DRC on or off for that service. The default setting is off.

Press the **DISPLAY** button to return to normal display mode.

If you want to apply DRC to another service, select the service and repeat.



MUTE button

The **MUTE** button is a quick way of reducing the output volume from your DRX-601EX.

1. Press the **MUTE** button to mute the sound.
The display on your DRX-601EX shows **MUTE**.
2. Press any button on the remote control or main unit to return to the previous volume.



DISPLAY button

The **DISPLAY** button enables you to change the display mode on your DRX-601EX. This button performs the same function as the **Display** button the main unit. See page 8 for details.

Press the **DISPLAY** button and repeat or hold down to cycle through the four display options.



INFO button

The **INFO** button enables you to change the information mode on your DRX-601EX. This button performs the same function as the **Info** button on the main unit. See page 9 for details.

Press the **INFO** button and repeat or hold down to cycle through the two information modes. Press the **DISPLAY** button to return to normal display mode.



Service select buttons

The ▼▲ and **SELECT** buttons enable you to cycle through and select services. Together, these buttons perform the same function as the large tuning knob on the main unit.

1. Press and release or hold down the ▼ or ▲ button to cycle through the stored services.
2. The bottom line of the display on your DRX-601EX shows the service names.
3. Press the **SELECT** button to select and listen to the displayed service.



PRI/SEC button

The **PRI/SEC** button enables you to select between the primary and secondary services where secondary services are available. If a secondary service is available for the current service, the Secondary LED will light up on the front of your DRX-601EX. See page 12 for an explanation of primary and secondary services. Press the **PRI/SEC** button and repeat or hold down to cycle through the available services.


Guide to Digital Radio

Your DRX-601E/ES enables you to receive and listen to the new DAB radio programmes. Digital Audio Broadcast (DAB) is a new form of radio broadcasting using digital signals rather than traditional analogue signals. DAB provides near CD-quality audio with virtually interference-free reception. DAB also enables broadcasters to transmit additional data along with the audio including other audio channels, text and in the future, perhaps computer data and images.

Digital radio is broadcast as groups of data called ensembles or multiplexes. Each multiplex can contain a number of services (stations) and each service contains a primary service and can contain secondary services as illustrated in the following diagram.

Each multiplex is transmitted in a set frequency range and received by your DRX-601EX for decoding. Your DRX-601EX enables you to receive multiplexes broadcast in frequency band III (174-240 MHz) and store the services in each multiplex for you to access. The number of multiplexes you receive will vary depending on your location. Band III is divided into 41 channels labelled 5A to 13F. Each channel can contain one multiplex. Channels allocated to the UK are in the range 11B to 12D.

Multiplexes and services have labels (names) which are used to identify them. Instead of needing to know a particular frequency to listen to your favourite broadcast you can simply select the service name. Secondary services and additional data such as text containing programme or multiplex information are also easily accessed using your DRX-601EX.

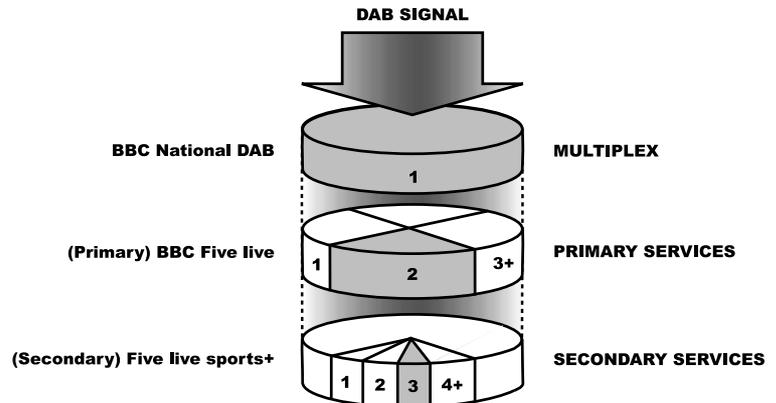

Useful addresses

The following addresses provide additional useful information about digital radio including coverage, available services and usage tips:

BBC Digital Radio
Room 5661
Broadcasting House
Portland Place
London, W1A 1AA

tel: 08700 100 123
e-mail: digitalradio@bbc.co.uk
website: www.bbc.co.uk/digitalradio

Digital Radio Development Bureau
The Radiocentre
77 Shaftesbury Avenue
LONDON, W1D 5DU

tel: 020 7306 2630
e-mail: info@drdb.org
web: www.drdb.org

Digital One
20 Southampton Street
LONDON, WC2E 7QH

tel: 020 7288 4600
e-mail: info@digitalone.co.uk
web: www.ukdigitalradio.com

Troubleshooting

This section gives some of the most likely solutions to problems you might have with your DRX-601EX.

I can't get any sound

Make sure your DRX-601EX is plugged in and switched on as explained on page 7.

Check that the source selection switch on the side panel is set to RADIO.

Check that the volume is not set too low and that you have not selected MUTE on the remote control, see page 11 for details.

Ensure that you have completed the Autotune procedure to find digital radio services as explained on page 7.

Remote control not functioning

Check that you have inserted the batteries correctly.

Check that you are not too far away from the main unit (not more than 7 metres recommended).

Check that the remote sensor on the main unit is not obscured.

Check if the Remote indicator LED lights up indicating that the remote signal is being received.

Display says 'No Service Check Setup'

Check that your aerial is connected and extended. Use the Autotune facility to search for services. Try using the Full search as explained on page 7.

I can't access secondary services

At the time of publishing not many secondary services are available. If secondary services are available for the currently selected service the Secondary indicator LED will light up. You use the remote control to select secondary services, see page 11 for details.

Display says 'Memory Reset Presets Lost'

This may occur if the unit has been switched off for an extended period of time (longer than two weeks). Use the Autotune feature as described on page 7 to refresh your stored services if necessary. You can then re-enter your presets using the remote control, as described on page 10.

Display has gone blank

This may occur if a broadcaster changes the label of a service or removes a label whilst you are listening to it. As the display is constantly updated it therefore may go blank. Follow the Autotune procedure, on page 7, to restore all available services to your unit.

I've lost my remote control

If you lose your remote control you can still use your DRX-601EX but you will not be able to access your preset stations, switch between primary or secondary services or use DRC or mute facilities. Contact VideoLogic Support to obtain a replacement remote control, see page 19 for details.

I can't hear my auxillary device although it is connected

Ensure that the connections to your auxillary device are secure and that you have set the source selection switch on the side panel to AUX IN, as described on page 6.

Ensure that your auxillary source is switched on and playing.

I can't hear the station I have selected on the display

To hear the station you need to confirm your selection by pressing the large tuning knob, as described on page 8, or the SELECT button on your remote control.

I hear a 'burbling' sound on some stations

Although DAB is excellent at providing quality audio from very little signal, the quality can suffer if the signal strength is too low. If that happens, a 'burbling' sound can sometimes be heard.

To help reduce this, check that your aerial is connected and extended, as described on page 5.

If the problem persists try repositioning your unit and repeating the autotune procedure, if not then a signal booster may be the solution - these are available from our on-line store at www.videologic.com

For the latest troubleshooting information and a list of Frequently Asked Questions (FAQs), visit the DRX-601EX support section on our website at www.videologic.com/pure.

Technical Specifications

This section lists the technical specifications for the DRX-601EX.

General	Stereo digital radio with full Band III reception capability, for reception of all UK DAB broadcasts. Fully compliant with ETS 300 401 and capable of decoding all DAB transmission modes 1-4. Analogue stereo output and input, optical and coaxial 48 kHz S/PDIF digital output and RDI digital output.
Speakers	Two full range 4 inch co-axial speakers
Frequency Range	Band III (174 - 240 MHz), with fast Autotune feature
Tuner Sensitivity	-98 dBm
Integrated DAC	24-bit 96 kHz stereo DAC
Input connectors	RF F-connector 75 Ω for DAB aerial connection (aerial supplied) Dual phono for external line level audio input (from auxillary device) with source selection switch
Output connectors	Dual phono for stereo analogue audio output Optical Toslink connector for digital S/PDIF output (IEC958 @ 48 kHz) Coaxial connector for digital S/PDIF output (IEC958 @ 48 kHz) Optical Toslink connector for digital RDI data output
Controls	Power on/off (rear panel) Rotary selection switch - selects service Autotune - tunes in unit to broadcast services Brightness - selects between 4 levels of LCD display brightness Display - selects between scrolling text, programme type, and service information Info - switches LCD between display of signal strength indicator and mono/stereo mode plus service's data rate Tone - controls bass/treble level Volume - controls output volume


LCD Display	High visibility STN LCD display with 16 x 2 characters and 4 user-selectable brightness levels
Indicators (front panel)	Remote control activity indicator Stereo service indicator Secondary service availability indicator
Frequency response	20 Hz to 20 kHz for 48 kHz decode 20 Hz to 12 kHz for 24 kHz low sample frequency (LSF) decode THD (nominal output) Less than 0.005% at 1 kHz S/N Ratio: 100 dB
Remote control	Infrared remote control functions: service select, preset service store/recall, DRC (dynamic range control), mute and primary or secondary information display
Power supply	High-performance low noise internal toroidal transformer power supply. 230V AC 50Hz. Integral main fuse holder in side panel.
Approvals	CE marked. Compliant with the EMC and Low Voltage Directives (89/336/EEC and 73/23/EEC)
Dimensions	300mm (width) x 280mm (height) x 120mm (depth)

Aerial advice


Your DRX-601EX is supplied with a telescopic DAB aerial. This is an indoor aerial which is designed to give good reception in areas with good to moderate DAB signal strength. In areas with poor DAB coverage or poor signal strength you may want to consider using a loft mounted or external aerial. To find out about coverage in your area, see page 13.

The following options may help you improve reception in your area and are available from our website, see page 19.

1. **Telescopic Aerial** Optimise the position of your telescopic aerial by extending it as high as possible and pointing it vertically. Use the Signal Strength meter to fine tune the aerial placement, see page 9.
2. **TV/FM Aerial** If you have an externally mounted TV or FM aerial it may provide a stronger signal than an indoor aerial but as they are not tuned for the digital radio frequency range and are pointed at your local TV/FM transmitter, reception may be no better. The standard TV or FM RF connector cannot be plugged into your DRX-601EX directly, you will need to use an RF to F-type adapter. You may also find that you need to use a signal booster if you want to use the aerial for both TV or FM and DAB reception.
3. **External or loft mounted DAB Aerial** Two main types are used. These types of aerials may require professional installation:
 - Dipole** - for use in marginal signal areas, this type is omnidirectional and should increase the strength of all DAB stations being received.
 - 4-element aerial** - for use in marginal or poor signal areas, this type is directional and has high gain. Like a TV or FM aerial this type needs to point at the transmitter. Installation requires someone to move the aerial while you monitor signal strength. If you receive signals from multiple transmitters you should point your aerial at the one which gives the best signal for the services to which you want to listen.
4. **Signal booster** This is a signal amplifier which connects into an aerial cable and boosts the strength of the received signal. If your aerial provides marginal reception, even after adjusting its position, a booster may improve your reception.

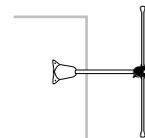

Dipole Aerial

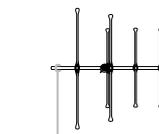

4-element Aerial

Getting Help

The Troubleshooting section of this manual, on page 14, lists some of the more likely reasons for problems you might have with your DRX-601EX.

If you still have a problem with your DRX-601EX, either visit our website at www.videologic.com/pure or contact us using the details below for the latest support information.

VideoLogic Systems,

Imagination Technologies Ltd,

Home Park Estate,

01923 277477

telephone

Kings Langley,

01923 270188

fax

Herts., WD4 8LZ, UK

support@videologic.com

e-mail

Accessories

VideoLogic supply a range of accessories and complementary products for your DRX-601EX including external aerials, signal boosters, audio cables and adapters.

Visit our website at www.videologic.com or call us on 01923 277488 to find out more.

Index

- A**
 - Accessories 19
 - Address 19
 - Aerial 2, 5
 - Aerial connector 3, 5
 - Autotune 7
 - Autotune button 3, 7
- B**
 - Band III 12
 - Batteries 4
 - Brightness button 3, 9
- C**
 - Changing the display mode 8
 - Channels 12
 - Connecting cables
 - aerial 5
 - auxiliary source 6
 - CD-R 6
 - DAT 6
 - digital devices 6
 - external decoder 6
 - MiniDisc 6
 - power 5
 - RDI 6
 - S/PDIF 6
 - Controls and Connectors 3
- D**
 - DAB 12
 - Data rate 9
 - Display brightness 9
 - Display button 3, 8
 - Display mode 8
 - DRC 10
 - DRC button 10
 - DRX-601EX 1
- E**
 - E-mail 19
 - Ensembles 12
 - External aerial 18
- F**
 - Fax 19
 - Frequency 8
 - Frequency Range 16
 - Front Panel 3
 - Fuse 3
- G**
 - Getting Help 19
 - Guide to Digital Radio 12
- H**
 - Help 19
- I**
 - Info button 3, 9
 - Information mode 9
 - INPUT sockets 3, 6
 - Introduction 1
 - Items 2
- L**
 - LCD Display 3
 - Leads 2
 - Lost remote 14
- M**
 - Main unit 2
 - Memory Reset 14
 - Multiplex 12
 - Mute 11
 - MUTE button 11
- N**
 - New service 7
 - No Service 14
- O**
 - On/Off button 3
 - OUTPUT sockets 3, 5
- P**
 - Package contents 2
 - Phono cable 2
 - Power Lead 2
 - Power switch 3
 - Preset buttons 10
 - PRI/SEC button 11
 - Primary services 12
 - Program Type 8
- R**
 - RDI socket 3, 6
 - Rear Panel 3
 - Remote control 10
 - Remote lost 15
 - Remote sensor 3
- S**
 - S/PDIF sockets 3, 6
 - Scrolling text 8
 - Secondary LED 3
 - Secondary services 12
 - Select button 11
 - Selecting a service 8, 11
 - Services 12
 - Setting up 5
 - Side panel 3
 - Signal strength 9
- Sockets** 3, 5
- Specifications** 16
- Stereo LED** 3
- Store button** 10
- Support** 19
- Switching on and off** 7
- T**
 - Technical Specifications 16
 - Telephone 19
 - Tuning 7
 - Tuning knob 3, 8
- U**
 - Unpacking 2
 - Using your DRX-601EX 7
- V**
 - VideoLogic 19
- W**
 - Website 19



Digital Audio Broadcasting

digital **Radio**
tomorrow's wireless™

Please return your registration card to the following address to validate your warranty.

VideoLogic Systems

Imagination Technologies Ltd.,

Home Park Estate,

Kings Langley, Herts., WD4 8LZ, UK

sales@videologic.com

support@videologic.com

01923 270188

01923 277488

01923 277477

fax

sales

support & service

www.videologic.com/pure

11533

PURE
by VideoLogic